


QUICK START GUIDE




PACKAGE INCLUDE:


- 1X TurboD Blade coil
- 1X Coil cover
- 1X Control box with handle
- 1X Shaft set (3 sections)
- 1X Armrest set (2 pieces)
- 1X Micro USB cable
- 1X Quick start guide

Version: 201903X5_EN

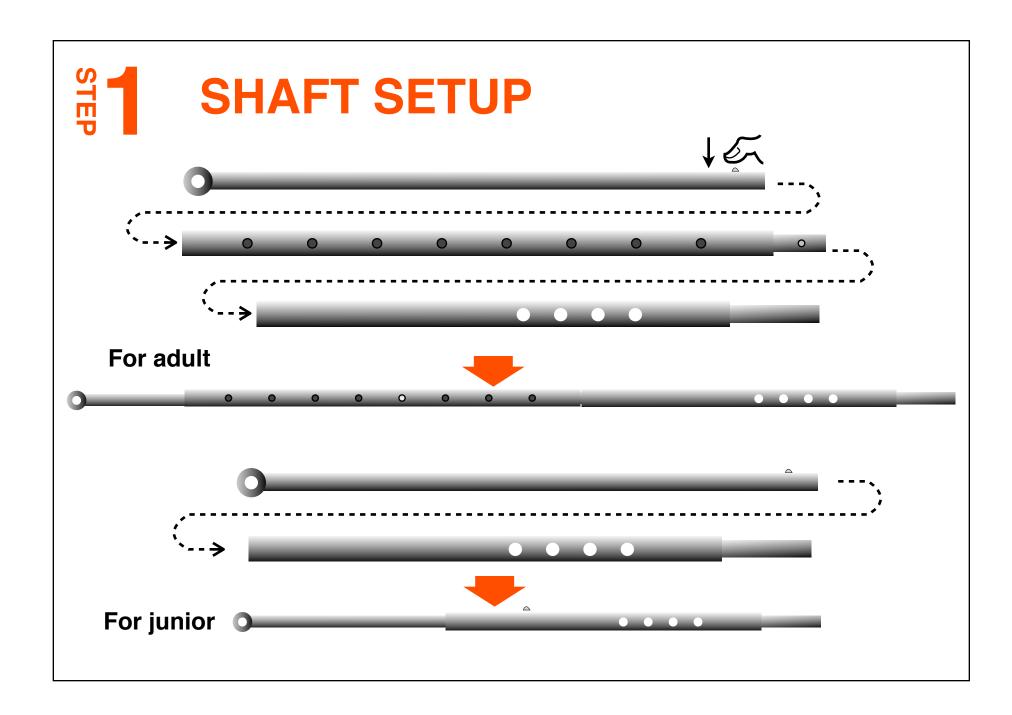

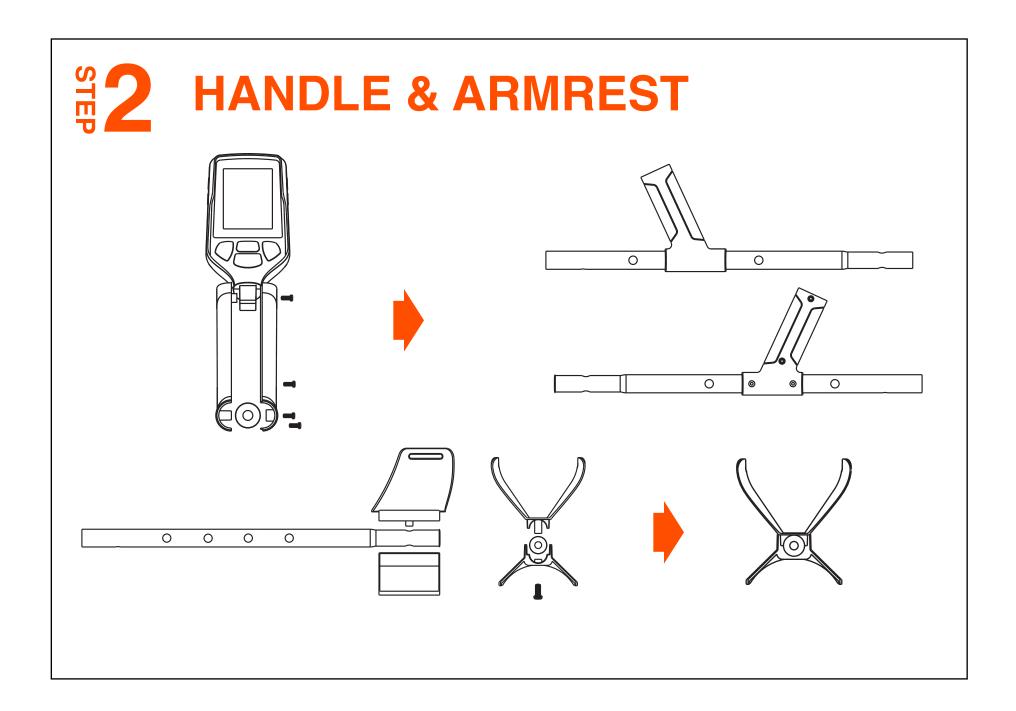

#3 COIL ROUTING

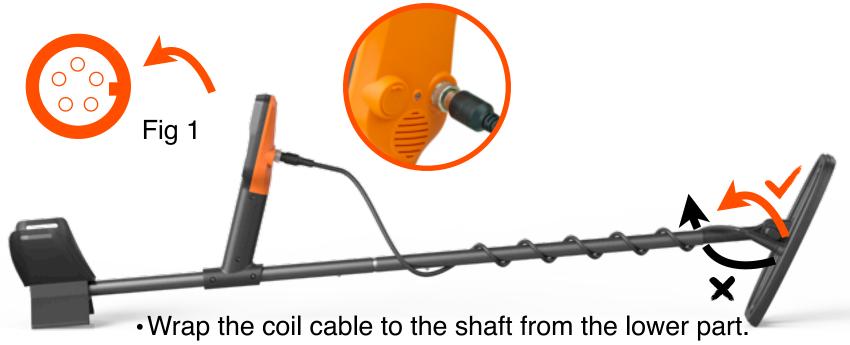

- Pay attention to the spiral direction.
- •Leave certain length at the tilting part to avoid damage when folding the coil.
- Match the connector, push in and tighten the ring(Fig 1).



QUICK START

- Press power button once to power on X5. Hold to power off.
- Press arrow up/down to increase or decrease sensitivity.
 - Press menu button once to change detection mode.
 - Hold pinpoint button and xing target to locate find
 - Hold and pump coil above ground to balance.

Or search "Quest X5 tutorial" on YouTube for more tips



DETECTING



SWING

Swing the coil approx 4cm above the ground. Overlap the last swing to avoid missing any target.



XING

When you hear a confident high tone, press and hold the pinpoint button to locate the target precisely.



PINPOINTING

Use a Xpointer to help you find the target faster. Simply use the tip of the Xpointer to "sniff" the target covered by dirt.



DIGGING

Use a Digger to dig out the soil. Try to keep the dig pattern as small as p o s s i b l e . Remember to cover it when you finish.



HEADPHONES & RECHARGE



Take off moisture and dust cover to access ports. Put it back to place to avoid damage by liquid or dirt.



You can use headphones, earphones with 3.5mm diameter type connector. Set to low audio volume before wear your headphones to avid hearing damage.

04:00Hr FULL



Connect the micro USB cable to a wall charger with USB port. The battery indicator will stop flashing when fully charged. Please allow 4 hours to refresh the X5.



TARGET ID & INDICATION BARS


X5 categorize metal signals into different digit from 1 to 99 based on the conductivity range. The high conductivity the higher digit you will get from the display. For better visualize effect we use indication bars to indicate which area the metal fall into. For example a US quarter or silver coin will be indicated as 84 together with the fifth bar. The detection and processing system will be affected by soil condition, trashy metal items. Depends on the strength of signal the detector indicates the depth of the target.

TONES

X5 output high tone and middle tone depends on the target ID so you can use your ear to make quick decision. Most experienced detectorists use this technics.

PROGRAMS

- Coin Mode. Very stable, medium recovery speed, target for ancient or modern coins TID range 40 - 99
- **Jewelry Mode**. Very sensitive, high recovery speed, target at Gold rings, Jewelry items. TID range 20 99
- All Metal Mode. High recovery speed, ZERO discrimination, good for gold prospecting. TID 0~99

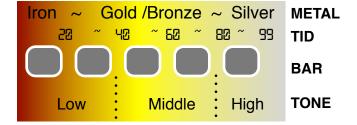

GROUND BALANCE

Different soil mineralization may vary. Ground balancing helps to remove or reduce the ground effect noise and be more focused on the real target.



NOTICE! Do not twist the coil tail and connector to avoid wire damage.

NOTICE! Do not store the device where prolonged exposure to extreme temperatures can occur to avoid device damage.

NOTICE! Never use a hard or sharp object to operate the touch pad, or damage may result.

NOTICE! Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

NOTICE! Secure the weather cap tightly to prevent damage to the USB port.

NOTICE! Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger.

Clean the detector

- Wipe the device using a cloth dampened with a mild detergent solution.
- Wipe it dry. After cleaning, allow the device to dry completely.
- Use a soft, clean, lint-free cloth. If necessary, lightly dampen the cloth with water.
- If using a dampened cloth, turn off the device and disconnect the device from power.
- Gently wipe the screen with the cloth.
- It can withstand heavy rain. Submersion in water can cause damage to the device.

? TROUBLESHOOTING

NOT POWER ON	No power, please recharge. Or contact with your dealer
NO ALARM / OVERLOAD	Coil not connect to the control box
VERY NOISY / FALSING	Please find another place with less interference
NO SOUND	Make sure the Volume is not ZERO level
FALSING WHEN SEARCHING IN GRASS	Please confirm the coil cable is not broken

TAKE A FEW MOMENTS TO OUR QUESTIONS. THEY WILL HELP US DEVELOP NEW PRODUCTS FOR THE FUTURE. ANSWER PLEASE

- 1 Why did you decide to buy a Deteknix detector?
- Detection performance
- New technology / Features.
- Style / Design
- Ergonomic / Weight
- Recommendation
- Promotion
- 2 Your age group?
- 18~25
- 26~36
- 37~55
- **26+**
- 3 Other suggestions:

Model Name	Title Zib Code	REGISTER DETECTOR ONLINE IS EASY Go to QuestMetalDetectors.com, Click SUPPORT and scroll down to REGISTRATION. If you need help please mail your info to info@questmetaldetectors.com and we will input for you.
Date Of Purchase Serial Number	Surname First Name Address Email Telephone	We'd like to tell you about new Quest products and services or get your opinion about your purchase. If you'd prefer us NOT to keep in touch, please tick this box.